

TRENDY | CLASSIC

A U T O M A T I C

NOTICE UTILISATION

INFORMATIONS IMPORTANTES

Nous vous remercions pour votre achat d'une montre automatique TRENDY CLASSIC®. Afin que votre expérience d'utilisateur vous apporte entière satisfaction, merci de prendre en compte ces quelques informations importantes :

À savoir

Votre montre étant entièrement mécanique, et ne nécessitant l'usage d'aucune pile, il est tout à fait normal de constater un léger retard ou une légère avance.

Penser à régulièrement remettre votre montre à l'heure pour éviter tout désagrément.

Etanchéité

Votre montre est étanche **3ATM**

Elle est adaptée à la vie quotidienne. Résiste à l'humidité ambiante et aux légères éclaboussures mais est inadaptée à un usage subaquatique.

MODE D'EMPLOI

Comment remonter sa montre ?

Le remontage se fait sur la 1^{re} position en tenant la couronne entre le pouce et l'index et en la tournant vers le haut (sens de la flèche).

Combien de tour de couronne donner ?


Lors de la première utilisation de votre montre automatique, veiller à ne pas remonter votre montre de plus de 5 tours de couronne en 1^{ère} position.

Concernant les utilisations suivantes, ne pas remonter votre montre de plus de 30 tours de couronne en 1^{ère} position.

Réserve de marche

Correctement remontée, votre montre à une réserve de marche située entre 36 et 48h

HEURE + DATE

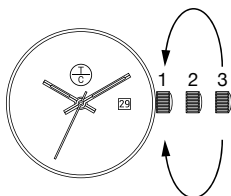


- 1 - Remontage
- 2 - Changement de date (trotteuse des secondes toujours en marche)
- 3 - Changement d'heure (trotteuse des secondes arrêtée)

«Zone de la mort»

Ne jamais changer la date avec la couronne en position 2 entre 21 heures et 4 heures au risque d'endommager gravement le mouvement de votre montre.

HEURE

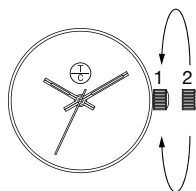

- 1 - Remontage
- 2 - Changement d'heure (trotteuse des secondes arrêtée)

TRENDY | CLASSIC

A U T O M A T I C

INSTRUCTIONS

IMPORTANT INFORMATIONS

Thank you for buying a TRENDY CLASSIC® automatic watch.

To enhance your user experience, we recommend you to take note of the few important informations below.

Good to know

Your watch has an automatic movement, and therefore doesn't need any battery. As it is fully mechanical, it is normal to notice that your watch runs a bit slow or fast.

To avoid inconvenience we advise to regularly set the time of your watch.

Water resistant

Your watch is **3ATM** water resistant. It is fitted to everyday life. It resists to moisture and splash but is inappropriate for a subaquatical use.

INSTRUCTIONS

How to wind up your watch ?

Winding up has to be made with the crown in its 1st position. Hold the crown between your thumb and forefinger and turn it clockwise.

How many turn do i have to make ?


At first use, you better have to not turn the crown more than 5 times.

Then, each time you will have to wind up your watch, you can turn the crown approximately 30 times.

Power reserve

Correctly wound up, your watch have a 36 to 48h power reserve.

HOUR + DATE

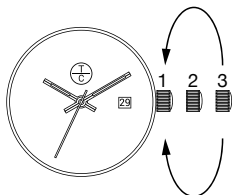


- 1 - Winding up
- 2 - Date setting up (second hand still moving)
- 3 - Hour setting up (second hand is not moving)

«Deadzone»

Do not set up the date between 9pm and 4am. It can critically damage your watch movement.

HOUR

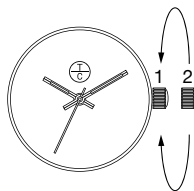

- 1 - Winding up
- 3 - Hour setting up (second hand is not moving)